

***BOSE***

---

**SOUNDLINK MICRO** PORTABLE SPEAKER (2<sup>ND</sup> GEN)

## Please read and keep all safety and use instructions.

For more information about your Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen), visit:  
[support.bose.com/micro2](https://support.bose.com/micro2)

Declarations of conformity can be found at: [www.bose.com/compliance](https://www.bose.com/compliance)

 Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements.

## Important Safety Instructions

Clean only with a dry cloth or water dampened cloth. Do not use cleaning products.

If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the connector port is fully dried out before charging.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the product does not operate normally or has been physically damaged.

## WARNINGS/CAUTIONS



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.



This symbol means use of this product with an incompatible or improperly installed battery could cause a safety hazard. Contact Bose customer service for battery service options or visit [bose.com/batt](https://www.bose.com/batt) for more information.

- This product must only be operated with compatible Bose certified batteries. Contact Bose customer service for battery service options.
- The battery provided with this product may present a risk of fire, explosion or chemical burn if mishandled, incorrectly replaced or replaced with an incorrect type.
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Use this product only with an agency approved LPS power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- The product label is located on the bottom of the product.
- To reduce the risk of fire, do not place any heating or cooking appliance beneath this product.

**WARNING:** Do not expose product or mounting components to any chemical substances that are not specified by Bose, including but not limited to lubricants, cleaning agents, contact sprays, or hydrocarbon based solvents. Exposure to such substances can lead to degradation of the plastic material, resulting in cracking and creating a falling hazard.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISSED Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with FCC and ISSED Canada radiation exposure limits set forth for the general population. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Receiver Category = [1]

Meets IMDA Requirements

CAN ICES (B)/NMB (B)

**FCC ID:** A94444771 **IC:** 3232A-444771

**For Europe:** Frequency band of operation 2400 to 2483.5 MHz. | Maximum transmit power less than 20 dBm EIRP.

## SAR Information

| Frequency Band    | Maximum Reported SAR(W/kg) |                   |
|-------------------|----------------------------|-------------------|
|                   | Body 1g SAR                | Extremity 10g SAR |
| QHS               | 0.15                       | <0.10             |
| SAR Limited(W/kg) | 1.6                        | 4.0               |

**Low-power Radio-frequency Devices Technical Regulations:** Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

**DON'T** attempt to remove the rechargeable lithium-ion battery from this product. Contact your local Bose retailer or other qualified professional for removal.

Removal of the rechargeable lithium-ion battery in this product should be conducted only by a qualified professional. Please contact your local Bose retailer or see [products.bose.com/static/compliance/index.html](https://products.bose.com/static/compliance/index.html) for further information.

The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 7.5 Watts in order to achieve the maximum charging speed.

**Power State Information:** The product, in accordance with the Ecodesign Requirements for Energy Related Products Directive 2009/125/EC and the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2020, is in compliance with Commission Regulation (EU) 2023/826. For information about power consumption for different standby modes and the period after which the product automatically reverts to those modes, visit [www.Bose.com/compliance](http://www.Bose.com/compliance) and select this regulation.



**Please dispose of used batteries properly, following local regulations.** Do not incinerate.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.



R-R-Bos-444771  
보스코리아 유한회사

# Names and Contents of Toxic or Hazardous Substances or Elements

## Toxic or Hazardous Substances and Elements

| Part Name     | Lead (Pb) | Mercury (Hg) | Cad-mium (Cd) | Hexava-lent (CR(VI)) | Polybro-minated Biphenyl (PBB) | Polybro-minated diphenyl-ether (PBDE) | Dybutyl phthal-ate (DBP) | Di-isobutyl phthal-ate (DIBP) | Butyl benzyl phthal-ate (BBP) | Bis(2-eth-ylhexyl) phthalate (DEHP) |
|---------------|-----------|--------------|---------------|----------------------|--------------------------------|---------------------------------------|--------------------------|-------------------------------|-------------------------------|-------------------------------------|
| PCBs          | X         | O            | O             | O                    | O                              | O                                     | O                        | O                             | O                             | O                                   |
| Metal Parts   | X         | O            | O             | O                    | O                              | O                                     | O                        | O                             | O                             | O                                   |
| Plastic Parts | O         | O            | O             | O                    | O                              | O                                     | O                        | O                             | O                             | O                                   |
| Speakers      | X         | O            | O             | O                    | O                              | O                                     | O                        | O                             | O                             | O                                   |
| Cables        | X         | O            | O             | O                    | O                              | O                                     | O                        | O                             | O                             | O                                   |

This table is prepared in accordance with the provisions of SJ/T 11364.

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.



# Equipment name: Bluetooth Speaker Type designation: 444771

## Restricted substances and its chemical symbols

| Unit          | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Hexavalent chromium (Cr <sup>6+</sup> ) | Polybrominated biphenyls (PBB) | Polybrominated diphenyl ethers (PBDE) |
|---------------|-----------|--------------|--------------|-----------------------------------------|--------------------------------|---------------------------------------|
| PCBs          | -         | O            | O            | O                                       | O                              | O                                     |
| Metal Parts   | -         | O            | O            | O                                       | O                              | O                                     |
| Plastic Parts | O         | O            | O            | O                                       | O                              | O                                     |
| Speakers      | -         | O            | O            | O                                       | O                              | O                                     |
| Cables        | -         | O            | O            | O                                       | O                              | O                                     |

**Note 1:** "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

**Note 2:** The "-" indicates that the restricted substance corresponds to the exemption.

**Date of Manufacture:** The eighth digit in the serial number indicates the year of manufacture; "5" is 2015 or 2025.

**Importers:** Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100 | Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Josefillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398 Phone Number: +52 55 5263 6500 | Bose Limited (H.K.), 7F., No. 2, Sec. 3, Minsheng E. Road, Zhongshan Dist., Taipei City 104511, Phone Number: +886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

**Mexico Service Phone Number:** 0800-266-0292

**Input Rating:** 5V ---, 1.5A

Model: 444771. The CMIIT ID is located on the bottom rear side of the speaker.

The **Bose Terms of Use** apply to this product: [worldwide.bose.com/termsfuse](https://worldwide.bose.com/termsfuse)

**License Disclosures:** To view the license disclosures that apply to the third-party software packages included as components of the Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen), use the Bose app. You can access this information from the Settings menu.

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. The trademark "iPhone" is used in Japan with a license from Aiphone K.K. App Store is service mark of Apple Inc.

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Google, Android, and Google Play are trademarks of Google LLC.

Snapdragon Sound is a product of Qualcomm Technologies, Inc. and/or its subsidiaries. Qualcomm, Snapdragon and Snapdragon Sound are trademarks or registered trademarks of Qualcomm Incorporated.

Spotify is a registered trademark of Spotify AB.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Bose and SoundLink are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2026 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

---

## Please complete and retain for your records

The serial number and model numbers are located on the bottom of the speaker.

Serial number: \_\_\_\_\_

Model number: 444771

Please keep your receipt. Now is a good time to register your Bose product. You can easily do this by going to [worldwide.Bose.com/ProductRegistration](https://worldwide.Bose.com/ProductRegistration)

---

## WHAT'S IN THE BOX

|                |   |
|----------------|---|
| Contents ..... | 9 |
|----------------|---|

## GETTING STARTED

|                     |    |
|---------------------|----|
| Initial setup ..... | 10 |
|---------------------|----|

## BLUETOOTH® CONNECTIONS

|                                                      |    |
|------------------------------------------------------|----|
| Connect to a device.....                             | 12 |
| Using your device's <i>Bluetooth</i> settings .....  | 12 |
| Using the Bose app .....                             | 13 |
| Reconnect to a device .....                          | 14 |
| Reconnect to the most recently-connected device..... | 14 |
| Reconnect to a different device .....                | 14 |
| Connect an additional device.....                    | 15 |
| Switch between two connected devices.....            | 15 |
| Disconnect a device .....                            | 16 |
| Clear the speaker device list.....                   | 16 |
| Android™ devices only.....                           | 17 |
| Connect using Fast Pair .....                        | 17 |
| Snapdragon Sound™ technology .....                   | 18 |

## SPEAKER CONTROLS

|                                 |    |
|---------------------------------|----|
| Power on/off.....               | 19 |
| Auto-off timer.....             | 20 |
| Media playback and volume ..... | 21 |

## BATTERY

|                              |    |
|------------------------------|----|
| Charge the speaker.....      | 22 |
| Charging time.....           | 23 |
| Battery protection mode..... | 23 |

## STATUS

|                              |    |
|------------------------------|----|
| Power light .....            | 24 |
| <i>Bluetooth</i> light ..... | 25 |
| Shortcut light .....         | 25 |

## SHORTCUTS

|                                      |    |
|--------------------------------------|----|
| Use your shortcut.....               | 26 |
| Change or disable your shortcut..... | 26 |

|                          |    |
|--------------------------|----|
| <b>SPOTIFY TAP</b> ..... | 27 |
|--------------------------|----|

## CONNECT BOSE PRODUCTS

|                                                                              |    |
|------------------------------------------------------------------------------|----|
| Link two Bose <i>Bluetooth</i> Speakers .....                                | 28 |
| Compatible products.....                                                     | 28 |
| Link using the product controls.....                                         | 29 |
| Switch between Stereo mode and Party mode .....                              | 30 |
| Unlink the speakers.....                                                     | 30 |
| Connect to a Bose Smart Speaker or Soundbar using SimpleSync technology..... | 31 |
| Compatible products.....                                                     | 31 |
| Connect using the Bose app.....                                              | 32 |
| Connect using the product controls .....                                     | 33 |
| Reconnect a Bose Smart Speaker or Soundbar .....                             | 33 |

## PORTABILITY

|                                 |    |
|---------------------------------|----|
| Strap configurations .....      | 34 |
| Carry the speaker .....         | 34 |
| Mount the speaker .....         | 34 |
| Water and dust resistance ..... | 35 |

## CARE AND MAINTENANCE

|                                        |    |
|----------------------------------------|----|
| Service the speaker battery .....      | 36 |
| Update the speaker .....               | 36 |
| Clean the speaker .....                | 36 |
| Store the speaker .....                | 36 |
| Replacement parts and accessories..... | 36 |
| Limited warranty .....                 | 36 |

## TROUBLESHOOTING

 
|                          |    |
|--------------------------|----|
| Troubleshooting.....     | 37 |
| Reset the speaker .....  | 37 |
| Restore the speaker..... | 38 |

## CONTENTS

Confirm that the following parts are included:



Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen)




USB Type-C® to USB Type-A cable

**NOTE:** If any part of the product appears to be missing or damaged, do not use it. Visit: [support.bose.com/micro2](https://support.bose.com/micro2) for troubleshooting articles, videos, and product repair or replacement.

The speaker ships with a partial charge. Before using the speaker for the first time, connect it to a power supply. The speaker doesn't need to be fully charged, but it does require the initial connection to activate the battery.


## INITIAL SETUP

 1. Connect the USB-C® end of the cable to the USB-C port on the bottom of the speaker.

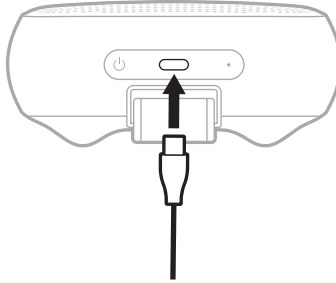


2. Connect the USB-A end of the cable to a USB-A power supply.

 The Power light slowly pulses white.

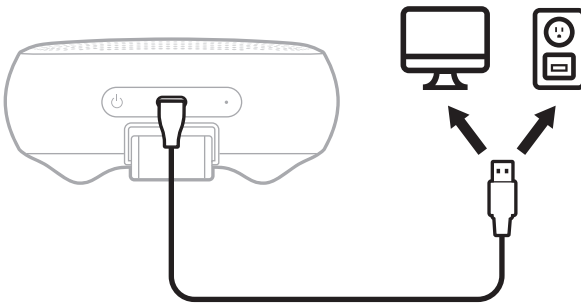

3. Press the Power button .

 The Power light slowly pulses white. The *Bluetooth* light slowly blinks blue.

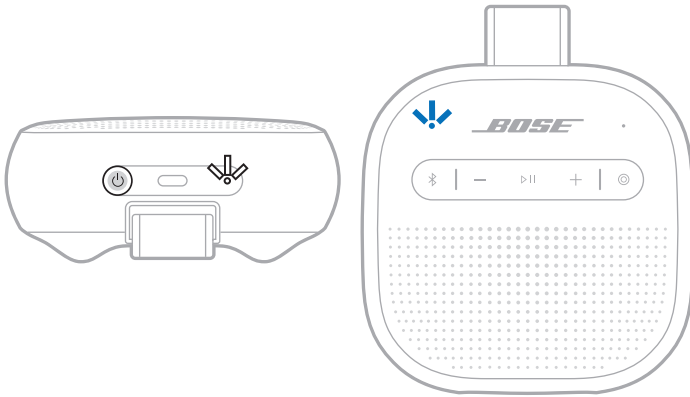

4. Connect to your device (see page 12).

You can store up to six devices in the speaker device list, and the speaker can be actively connected to up to two devices at a time. You can play audio from only one device at a time.

## CONNECT TO A DEVICE

You can connect the speaker to your device using any of the following:

- Your device's *Bluetooth* settings (see "Using your device's *Bluetooth* settings")
- The Bose app (see page 13)
- Fast Pair (Android devices only) (see page 17)

 
### Using your device's *Bluetooth* settings

1. Press and hold the *Bluetooth* button  until the *Bluetooth* light slowly blinks blue.



2. On your device, access *Bluetooth* settings.
3. Select the speaker from the list of available products.

**NOTE:** Look for the name you entered for the speaker in the Bose app. If you didn't name the speaker, the default name appears.

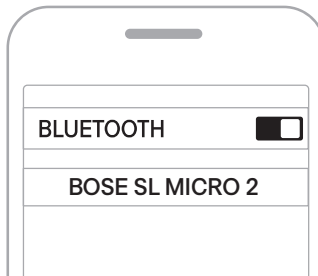

The speaker appears in the list of connected products. The *Bluetooth* light glows solid white (see page 25).


## Using the Bose app

 The Bose app lets you set up and control the speaker from any device, such as a smartphone or tablet.

Using the app, you can manage *Bluetooth* connections, manage speaker settings, adjust the audio, choose your voice prompt language, and get any future updates and new features made available by Bose.

**NOTE:** If you've already downloaded the Bose app for another Bose product, you can add the speaker from the product list screen.

1. On your device, download the Bose app.

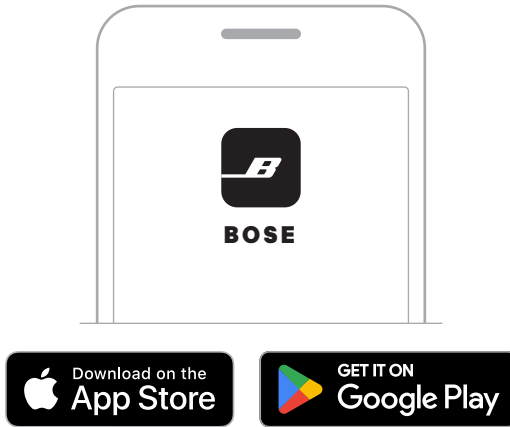

2. Follow the app instructions to add the speaker.

## RECONNECT TO A DEVICE

### Reconnect to the most recently-connected device

When powered on, the speaker connects with the two most recently-connected devices.

#### NOTES:

- The device must be within range (30 ft or 9 m) and powered on.
- Make sure the *Bluetooth* feature is enabled on your device.

### Reconnect to a different device

**NOTE:** The device must be within range (30 ft or 9 m) and powered on.

Reconnect a different device using the device *Bluetooth* settings or the Bose app (see page 13).

**NOTE:** If two devices are already connected to the speaker, the newly-connected device replaces the older of the two connections.

## CONNECT AN ADDITIONAL DEVICE

The speaker can be actively connected to two devices at a time (multi-point connection).

To connect an additional device, see page 12.

### NOTES:

- You can only play audio from one device at a time.
- To manage or disable the multi-point connection feature, use the Bose app. To access this option, tap Source on the product control screen.
- Disabling the multi-point connection feature disconnects the second connected device.

## SWITCH BETWEEN TWO CONNECTED DEVICES

1. Pause audio on your first device.
2. Play audio on your second device.

## DISCONNECT A DEVICE

Use the device's *Bluetooth* settings or the Bose app.

**NOTE:** Disabling the *Bluetooth* feature on your device disconnects the speaker and all other *Bluetooth*-connected products.

## CLEAR THE SPEAKER DEVICE LIST

1. Press and hold the *Bluetooth* button  for 15 seconds until you hear a tone and the *Bluetooth* light blinks blue.



2. Delete the speaker from the *Bluetooth* list on your device.

All devices are cleared, and the speaker is ready to connect (see page 12).

## ANDROID DEVICES ONLY

If you have an Android device, you can access the following additional connection features.

### Connect using Fast Pair

In one tap, the speaker enables quick, effortless *Bluetooth* pairing with your Android device.

#### NOTES:

- To use Fast Pair, you need an Android device running Android 6.0 or higher.
  - Your Android device must have the *Bluetooth* and Location features enabled.
1. Press and hold the *Bluetooth* button  until the *Bluetooth* light slowly blinks blue.



2. Place the speaker next to your Android device.

A notification displays on your device prompting you to pair the speaker.

**NOTE:** If you don't see a notification, check that notifications are enabled for the Google Play Services app on your device.

3. Tap the notification.

Once the speaker is connected, a notification appears confirming that the connection is complete.

**NOTE:** You can also tap the button on the notification to download the Bose app and finish setting up the speaker.

 
## Snapdragon Sound technology

Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen) features Snapdragon Sound technology. Snapdragon Sound optimizes Qualcomm® audio technologies across connected devices to ensure the best sound quality, connection stability, and latency for your streaming audio.

To experience Snapdragon Sound, you need a Snapdragon Sound-certified device, such as a compatible Android device. Once you connect the speaker, your device will automatically stream audio using the aptX Adaptive *Bluetooth* codec.

**NOTE:** To see which Snapdragon Sound features the speaker supports and check if your device is compatible, visit: [support.bose.com/micro2](https://support.bose.com/micro2)


Controls are located on the bottom and the front of the speaker.

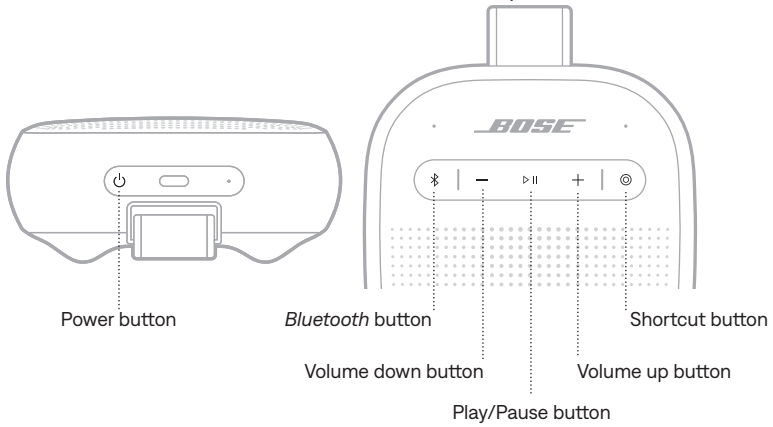

## POWER ON/OFF

Press the Power button .

 When powered on, the Power light glows according to the current battery level (see page 24).

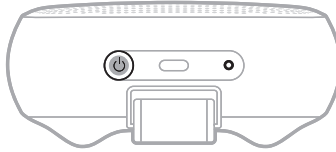

## Auto-off timer

The auto-off timer conserves the battery when the speaker is operating on battery power. The speaker switches off when audio has stopped and buttons have not been pressed for 20 minutes.

 
To wake the speaker, press the Power button  or press and hold the *Bluetooth* button .

**NOTE:** To change the timer setting, use the Bose app. You can access this option from the Settings menu.

## Disable the auto-off timer

To disable the auto-off timer, use the Bose app. You can access this option from the Settings menu.

## MEDIA PLAYBACK AND VOLUME

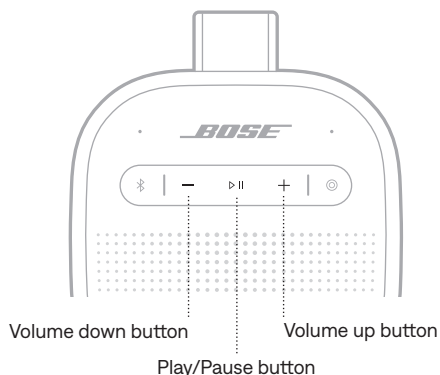

| FUNCTION             | WHAT TO DO                                                                                                                                                                                                                  |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Play/Pause</b>    | Press ▷  .                                                                                                                                                                                                                  |
| <b>Skip forward</b>  | Double-press ▷  .                                                                                                                                                                                                           |
| <b>Skip backward</b> | Triple-press ▷  .                                                                                                                                                                                                           |
| <b>Volume up</b>     | Press +.<br><b>NOTES:</b> <ul style="list-style-type: none"> <li>To quickly increase the volume, press and hold +.</li> <li>When the maximum volume is reached, the <i>Bluetooth</i> light blinks white 2 times.</li> </ul> |
| <b>Volume down</b>   | Press -.<br><b>NOTES:</b> <ul style="list-style-type: none"> <li>To quickly decrease the volume, press and hold -.</li> <li>When the minimum volume is reached, the <i>Bluetooth</i> light blinks white 2 times.</li> </ul> |


**TIP:** You can also increase or decrease the volume using the volume controls on your device or in the Bose app. You can access this option on the product control screen.

## CHARGE THE SPEAKER

 
**CAUTION:** Do not attempt to charge the speaker while the speaker is wet. Doing so may cause damage to the speaker. The speaker is waterproof, but the USB-C port must be fully dried out before charging.

**NOTE:** Make sure you're using the Bose-provided USB cable or a similar USB cable. Bose recommends using a 5V  $\text{---}$ , 1.5A capable power source.

1. Connect the USB-C® end of the cable to the USB-C port on the bottom of the speaker.

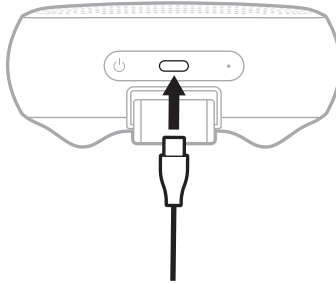

 2. Connect the USB-A end of the cable to a USB-A power supply.

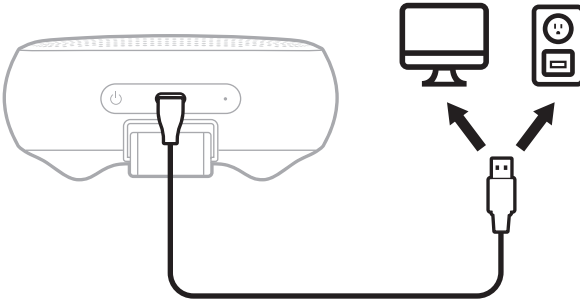

While charging, the battery light pulses white. When the battery is fully charged, the battery light glows solid white.

## Charging time

Allow up to 4 hours to fully charge the battery.<sup>1</sup>

A full charge powers the speaker up to 12 hours.<sup>2</sup> At maximum volume, the battery lasts up to 3 hours.<sup>3</sup>

Charging time and battery performance vary with the USB power supply capability, music content, and speaker volume.

## Battery protection mode

When the speaker battery is depleted (0%) it enters battery protection mode. To reactivate the speaker, connect it to a power supply and press the Power button .

When not in use, store the speaker in a cool place.

 
**CAUTION:** Do NOT store the speaker for extended periods when fully charged or with a remaining charge of less than 10%.

---

All tests conducted by Bose with production-representative Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen).

- 1 With 5V/1.5A (7.5W) USB-C capable power supply, from 0% to 100% while unit is in standby mode. Charging times will vary when not using the recommended 7.5W supply.
- 2 Using *Bluetooth* A2DP audio at 50% volume and between 68° F – 77° F (20° C – 25° C), with default EQ using a mix of Top 50 Global tracks as of November 2024 and no charging of external devices. Battery performance varies with individual user conditions such as audio content, loudness, and environmental temperature.
- 3 Using *Bluetooth* A2DP audio at 100% volume and between 68° F – 77° F (20° C – 25° C), with default EQ using a mix of Top 50 Global tracks as of November 2024 and no charging of external devices. Battery performance varies with individual user conditions such as audio content, loudness, and environmental temperature.

The Power light is located at the bottom of the speaker. The *Bluetooth* and Shortcut lights are located on the front of the speaker.

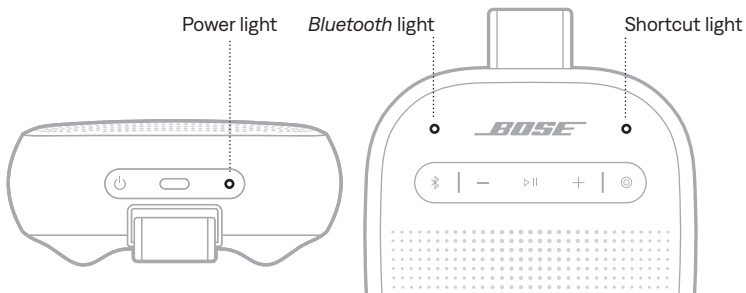

## POWER LIGHT

Shows the battery, charging, update, and error status.

| LIGHT ACTIVITY                                      | SYSTEM STATE                                   |
|-----------------------------------------------------|------------------------------------------------|
| <b>Solid white</b>                                  | Full charge                                    |
| <b>Solid amber</b>                                  | Low charge                                     |
| <b>Blinks amber</b>                                 | Need to charge                                 |
| <b>Slowly pulses white</b>                          | Charging                                       |
| <b>Blinks white 3 times (repeated)</b>              | Updating software                              |
| <b>Quickly blinks white (3 seconds)</b>             | Reset complete                                 |
| <b>Quickly blinks white and amber (alternating)</b> | Error - contact Bose customer service          |
| <b>Blinks amber 3 times (repeated)</b>              | Failed battery - contact Bose customer service |

## BLUETOOTH LIGHT

Shows the *Bluetooth* connection status.

| LIGHT ACTIVITY       | SYSTEM STATE        |
|----------------------|---------------------|
| Slowly blinks blue   | Ready to connect    |
| Quickly blinks blue  | Connecting          |
| Solid white          | Connected           |
| Blinks white 2 times | Device list cleared |

## SHORTCUT LIGHT

Shows the status of speakers when linking is set as the shortcut.

| LIGHT ACTIVITY      | SYSTEM STATE         |
|---------------------|----------------------|
| Slowly blinks white | Speakers are linking |
| Solid white         | Speakers are linked  |

The programmable Shortcut button  enables you to quickly and easily access one of the following functions:

- Link two Bose *Bluetooth* Speakers (default) (see page 35)
- Access Spotify Tap (see page 27)

## USE YOUR SHORTCUT

Press the Shortcut button .

The Shortcut light blinks once.



**NOTE:** The Shortcut button  is set by default to link two Bose *Bluetooth* speakers (see page 35).

## CHANGE OR DISABLE YOUR SHORTCUT

To change or disable your shortcut, use the Bose app. To access this option, tap Shortcut on the product control screen.

Spotify Tap is music to your ears, quite literally. Get the tunes playing with a simple gesture.

**NOTE:** To use Spotify Tap, it must be set as your shortcut in the Bose app and the Spotify app must be up to date.

1. Press the Shortcut button  to play a recommendation based on your listening taste.



2. Press the Shortcut button  again for the next recommendation made just for you.

## LINK TWO BOSE *BLUETOOTH* SPEAKERS

For a more immersive music experience, you can sync your Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen) with another compatible Bose *Bluetooth* speaker and play the same audio from both speakers in Stereo mode or Party mode.

- Stereo mode (left speaker and right speaker play separately)
- Party mode (both speakers play in unison)

### NOTES:

- The Shortcut button © is set by default to link two Bose *Bluetooth* speakers.
- You can link to only one other speaker at a time.
- Make sure that the two speakers are within 30 ft (9 m) of each other.
- Make sure that the two speakers are within 30 ft (9 m) of the streaming device.
- For an optimal experience, position the speakers in the same room or outdoor area with no obstructions between them. Performance may vary based on device, distance, and environmental factors.

### Compatible products

You can link the Bose SoundLink Micro Portable Speaker (2<sup>nd</sup> Gen) to any Bose *Bluetooth* speaker that has a Shortcut button.



## Link using the product controls

1. On the speaker, press the Shortcut button .

The voice prompt directs you to press the Shortcut button on a second speaker.  
The Shortcut light slowly blinks white.



 
2. On a second compatible Bose *Bluetooth* speaker, press the Shortcut button .

The Shortcut light slowly blinks white.



Once the two speakers are linked, a voice prompt announces the mode on both speakers. The Shortcut light on both speakers glows solid white.

**NOTE:** If the speakers are the same model you hear “Stereo mode,” followed by “Left” on the primary speaker and “Right” on the secondary speaker. If they are different models, you hear “Party mode” on both speakers.

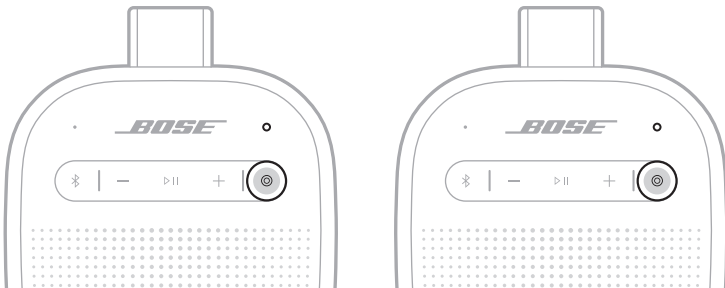

## Switch between Stereo mode and Party mode

On either speaker, press the Shortcut button .



 
A voice prompt announces the mode on each speaker.

**NOTE:** If the speakers are different models, you can only play audio in Party mode.

**TIP:** You can also switch between Stereo mode and Party mode using the Bose app. You can access this option on the product control screen.

## Unlink the speakers

On either speaker, press the Power button  or press and hold the Shortcut button .

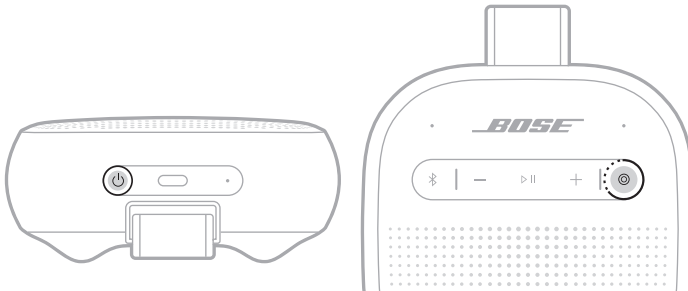

A voice prompt announces the speakers are no longer linked.

**TIP:** You can also use the Bose app to unlink the speakers. You can access this option on the product control screen.

## CONNECT TO A BOSE SMART SPEAKER OR SOUNDBAR USING SIMPLESYNC TECHNOLOGY

With Bose SimpleSync technology, you can connect the speaker to a Bose Smart Speaker or Bose Smart Soundbar to listen to the same audio in two different rooms at the same time.

**NOTE:** SimpleSync technology has a *Bluetooth* range of up to 30 ft (9 m). Walls and construction materials can affect reception.

### Compatible products

You can connect the speaker to any Bose Smart Speaker or Bose Smart Soundbar.

Popular compatible products include:

- Bose Smart Ultra Soundbar/Bose Ultra Soundbar
- Bose Smart Soundbar 900
- Bose Smart Soundbar 700/Bose Soundbar 700
- Bose Smart Soundbar 600
- Bose Soundbar 500
- Bose Smart Speaker 500/Bose Home Speaker 500
- Bose Home Speaker 300
- Bose Portable Smart Speaker/Bose Portable Home Speaker

New products are added periodically. For a complete list and more information, visit: [support.bose.com/Groups](https://support.bose.com/Groups)

## Connect using the Bose app

1. Press and hold the *Bluetooth* button  until the *Bluetooth* light slowly blinks blue.



2. Use the Bose app to connect the speaker to a compatible Bose product. For more information, visit: [support.bose.com/Groups](https://support.bose.com/Groups)

### NOTES:

- It could take up to 30 seconds to connect.
- Make sure that the speaker is within 30 ft (9 m) of the speaker or soundbar.
- You can connect the speaker to only one product at a time.

## Connect using the product controls

1. Press and hold the *Bluetooth* button  until the *Bluetooth* light slowly blinks blue.



2. On the soundbar remote or the top of the speaker, press and hold the *Bluetooth* button  until the light bar or light ring pulses blue.

The speaker connects to the soundbar or speaker, and you hear the same audio through both devices.

### NOTES:

- It could take up to 30 seconds to connect.
- Make sure that the speaker is within 30 ft (9 m) of the speaker or soundbar.
- You can connect the speaker to only one product at a time.

## RECONNECT A BOSE SMART SPEAKER OR SOUNDBAR

Use the Bose app to reconnect the speaker to a previously-connected compatible Bose product. For more information, visit: [support.bose.com/Groups](https://support.bose.com/Groups)

### NOTES:

 
- The speaker or soundbar must be within range (30 ft or 9 m) and powered on.
- If the speaker doesn't connect, see "Troubleshooting" on page 37.

## STRAP CONFIGURATIONS

You can adjust the strap in different ways to easily transport the speaker.

### Carry the speaker


You can use the top of the strap fastener to easily carry the speaker. You can also attach it to a carabiner or a cord.

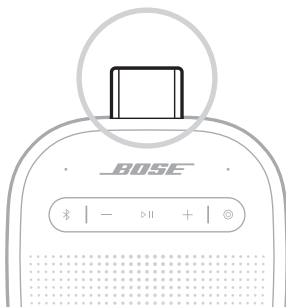


### Mount the speaker

The strap can be used to mount the speaker to a handle or bar.

 1. Undo the strap fastener, completely pull the strap out of the bottom slot, and wrap it around the handle or bar.

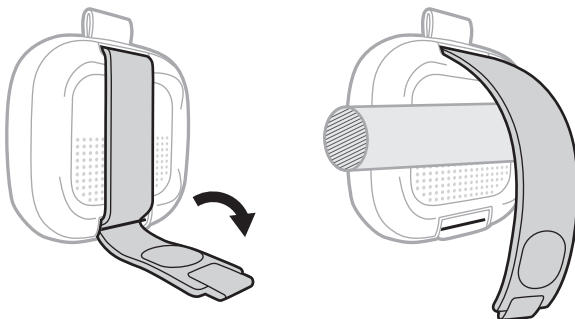

 2. Thread the strap through the bottom slot, tighten it, and secure it with the fastener.

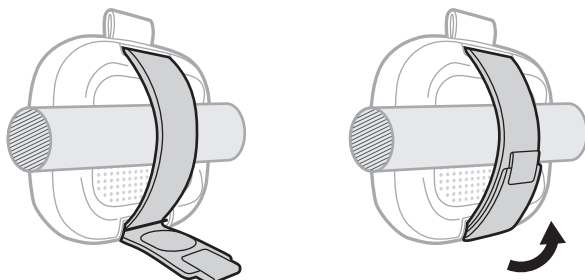

## WATER AND DUST RESISTANCE

The speaker is waterproof, splash resistant, and dustproof. It is rated IP67 and IP64. You can immerse the speaker in water for up to 30 minutes at a depth of up to 3.3 ft (1 m). It can also be used while showering and in the rain or snow.

### CAUTIONS:

- Do NOT submerge this speaker in any pool of water deeper than 3.3 ft (1 m).
- If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the connector port is fully dried out before charging.
- Never attempt to charge the speaker while it is wet. Doing so may cause damage to the speaker.



## SERVICE THE SPEAKER BATTERY

This product must only be operated with compatible Bose certified batteries. For battery service options, contact Bose customer service or visit [support.Bose.com/micro2](https://support.Bose.com/micro2)

## UPDATE THE SPEAKER

The speaker begins updating automatically when connected to the Bose app and an update is available. Follow the app instructions. When the update begins, the Power light blinks white 3 times (repeated) until the update is complete.

You can also update the speaker using the Bose updater website. On your computer, visit: [btu.Bose.com](https://btu.Bose.com) and follow the on-screen instructions. When the update begins, the Power light blinks white 3 times (repeated) until the update is complete.

## CLEAN THE SPEAKER

The speaker may require periodic cleaning.

- Clean the surface of the speaker with a soft, damp cloth (water only). Make sure the USB-C port is fully dried out before charging.
- Do not use any solvents, chemicals or cleaning solutions containing alcohol, ammonia, or abrasives.
- If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the USB-C port is fully dried out before charging.

## STORE THE SPEAKER

When not in use, store the speaker in a cool place.

**CAUTION:** Do NOT store the speaker for extended periods when the battery is fully charged or has a low charge (see page 23).

## REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: [support.Bose.com/micro2](https://support.Bose.com/micro2)

## LIMITED WARRANTY

The speaker is covered by a limited warranty. Visit our website at [worldwide.Bose.com/Warranty](https://worldwide.Bose.com/Warranty) for details of the limited warranty.

To register your product, visit [worldwide.Bose.com/ProductRegistration](https://worldwide.Bose.com/ProductRegistration) for instructions. Failure to register will not affect your limited warranty rights.

## TROUBLESHOOTING

You can access troubleshooting articles, videos, and other resources at: [support.Bose.com/micro2-og](https://support.Bose.com/micro2-og)

If you're unable to resolve your issue, contact Bose customer service.

Visit: [worldwide.Bose.com/contact](https://worldwide.Bose.com/contact)

 
## RESET THE SPEAKER

If the speaker is unresponsive, you can reset it.

### NOTES:

- Make sure the USB-C cable isn't connected to the speaker.
- Resetting the speaker resets the product controls and reboots the speaker. It doesn't clear any device settings.

To reset the speaker, press and hold the Power button  for up to 15 seconds until the speaker powers off.

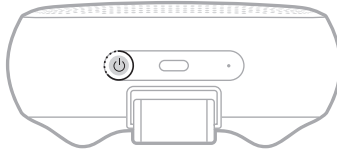

After it powers off, the speaker automatically powers back on. The Power light glows according to the battery level (see page 24).

**NOTE:** If you're unable to resolve your issue, additional troubleshooting and support is available at: [support.Bose.com/micro2](https://support.Bose.com/micro2)

## RESTORE THE SPEAKER

Factory reset clears connected devices and language settings from the speaker and returns it to the original factory settings.

1. To power on the speaker, press the Power button .
2. Press and hold the Volume up button  and Volume down button  for 5 seconds until the Power light quickly blinks white 4 times.



The speaker powers off and then powers back on. You hear “Ready to connect,” and the *Bluetooth* light slowly blinks blue.

**NOTE:** If you’re unable to resolve your issue, additional troubleshooting and support is available at: [support.Bose.com/micro2](https://support.Bose.com/micro2)



898490-0010