

BOSE

TV SPEAKER (2ND GEN)

Please read and keep all safety and use instructions.

Declarations of conformity can be found at: www.Bose.com/compliance

CE Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements.

Important Safety Instructions

Do not use this apparatus near water.

Clean only with a dry cloth.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNINGS/CAUTIONS

 WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- Do not ingest battery, chemical burn hazard.
- The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal chemical burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- Even used batteries may cause severe injury or death.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Call a local poison control center for treatment information.
- To avoid risk of explosion, fire or chemical burn, use caution in replacing the battery and replace only with an agency approved battery.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

- Do not force discharge, recharge, disassemble, heat above 185°F (85° C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Non-rechargeable batteries are not to be recharged.
- Battery Type: CR2032 | Nominal battery voltage: 3V



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

- Safe Installation Instructions: Ensure feet under product are clean and free of debris. Place the product on a clean, dust-free, stable, flat, and level surface. For proper support, all feet must be in full contact with surface. Beware of potential fall hazards as audio vibrations can cause the product to move. Do not position above seating or occupied areas.
- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, dripping, splashing, or moisture and do not place liquid filled objects such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Do NOT use a power inverter with this product.
- Do NOT use in vehicles or boats.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



仅适用于海拔 2000m 以下地区安全使用

Use at altitude less than 2000 meters only.

- The battery provided with this product may present a risk of fire, explosion or chemical burn if mishandled, incorrectly replaced or replaced with an incorrect type.
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- Only use the following hardware to mount this product: Bose Soundbar Wall Bracket. Do not mount on surfaces that are not sturdy, or that have hazards concealed behind them, such as electrical wiring or plumbing. If you are not sure about installing the bracket, contact a qualified professional installer. Ensure the bracket is installed according to local building codes.
- Only for mounting on the following surfaces:
 - Wallboard $\geq \frac{3}{8}$ " (10 mm)
 - Masonry

If mounted on surfaces other than stated above please contact a professional installer.

- When positioning the product, make sure it is not blocking any ventilation openings on your TV or monitor. Refer to the owner's guide that came with your TV or monitor and install in accordance with the manufacturer's instructions.
- Due to ventilation requirements, Bose does not recommend placing the product in a confined space such as in a wall cavity or in an enclosed cabinet.
- Do not place or install near any heat sources such as fireplaces, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- The product label is located on the back of the speaker.

WARNING: Do not expose product or mounting components to any chemical substances that are not specified by Bose, including but not limited to lubricants, cleaning agents, contact sprays, or hydrocarbon based solvents. Exposure to such substances can lead to degradation of the plastic material, resulting in cracking and creating a falling hazard.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISSED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between radiator and your body.

FCC ID: A94445211

CAN ICES (B) / NMB (B)

For Europe: Frequency band of operation 2400 to 2483.5 MHz. | Maximum transmit power less than 20 dBm EIRP.

Maximum transmit power is below regulatory limits such that SAR testing is not necessary and exempt per applicable regulations.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Low-power Radio-frequency Devices Technical Regulations

Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

Power State Information: The product, in accordance with the Ecodesign Requirements for Energy Related Products Directive 2009/125/EC and the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2020, is in compliance with Commission Regulation (EU) 2023/826. For information about power consumption for different standby modes and the period after which the product automatically reverts to those modes, visit www.Bose.com/compliance and select this regulation.

Wired Network	
Wired network port deactivation/activation procedures. Deactivating all networks will enable standby mode.	HDMI: To activate an HDMI connection, connect one end of the HDMI cable to the HDMI port on the speaker and the other end to an audio source. To deactivate, remove the HDMI cable.



Please dispose of used batteries properly, following local regulations. Do not incinerate.



R-R-Bos-445211

보스코리아 유한회사

Names and Contents of Toxic or Hazardous Substances or Elements										
Toxic or Hazardous Substances and Elements										
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)	Dybutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)	Butyl benzyl phthalate (BBP)	Bis(2-ethylhexyl) phthalate (DEHP)
PCBs	X	O	O	O	O	O	O	O	O	O
Metal Parts	X	O	O	O	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O	O	O	O	O
Speakers	X	O	O	O	O	O	O	O	O	O
Cables	X	O	O	O	O	O	O	O	O	O
This table is prepared in accordance with the provisions of SJ/T 11364. O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572. X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.										

Restricted substances and its chemical symbols						
Unit	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁺⁶)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBs	-	O	O	O	O	O
Metal Parts	-	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Speakers	-	O	O	O	O	O
Cables	-	O	O	O	O	O
Note 1: "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. Note 2: The "-" indicates that the restricted substance corresponds to the exemption.						

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "6" is 2016 or 2026.

Importers: Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100 | Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Joselillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398 Phone Number: +52 55 5263 6500 | Bose Limited (H.K.), 7F., No. 2, Sec. 3, Minsheng E. Road, Zhongshan Dist., Taipei City 104511, Phone Number: +886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

Mexico Service Phone Number: 0800-266-0292

Input Rating: 100 – 240V ~, 50/60Hz, 36W

Model: 445211. The CMIIT ID is located on the product label on the back of the speaker.

California: Contains lithium ion battery with Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate

This product is covered by a **Bose Limited Warranty**, available at worldwide.Bose.com/Warranty

License Disclosures: To view the license disclosures that apply to the open source software packages included as components of the Bose TV Speaker (2nd Gen), visit www.Bose.com/tvs2disclosures. The license disclosures are also available as part of future software update packages made available by Bose. For more information, visit support.Bose.com/tvs2

The **Bluetooth®** word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

 Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright 1992–2019 Dolby Laboratories. All rights reserved.

 The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

 Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Brazil, Canada, Mexico, and the United Kingdom. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email rokutvready@roku.com

Bose and the B logo are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2026 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Serial Number and Regulatory Markings Location: This information is located on the product label on the back of the speaker and on the bottom of the speaker.

Please complete and retain for your records

Serial number: _____

Model number: 445211

Please keep your receipt. Now is a good time to register your Bose product. You can easily do this by going to worldwide.Bose.com/ProductRegistration

WHAT'S IN THE BOX

Contents	9
----------------	---

SPEAKER PLACEMENT

Recommendations.....	10
Wall mount the speaker.....	11
Adjust audio for wall mounting.....	11

SET UP THE SPEAKER

Connect the speaker to your TV	12
Connect the speaker to power.....	13

SPEAKER CONTROLS

Remote functions	14
Power	15
Volume.....	16
Sources.....	17
Dialogue mode.....	18
Adjust the bass	19
Reset the bass	20
Program a third-party remote.....	21
Put the speaker into program mode.....	21
Program the TV remote	22

BLUETOOTH® CONNECTIONS

Connect a mobile device.....	23
Disconnect a mobile device.....	24
Reconnect a mobile device.....	24
Connect an additional mobile device	25
Clear the speaker device list.....	25

SPEAKER STATUS

<i>Bluetooth</i> status.....	26
Media playback and volume status.....	27
Error status	28

CONNECT TO A ROKU TV™

Roku TV Ready™	29
----------------------	----

ALTERNATE CONNECTION

Alternate cable options.....	30
TV only has an optical port.....	31
TV only has analog output ports	32
TV only has a headphone port.....	33
Verify audio from the speaker	34
Alternate controls	34
Auto-wake (optical/analog connection only).....	34

CONNECT ACCESSORIES (OPTIONAL)

CARE AND MAINTENANCE

Serial number and regulatory markings location.....	36
Update the speaker	36
Replace the remote battery	36
Clean the speaker	37
Replacement parts and accessories.....	37
Limited warranty	38

TROUBLESHOOTING

Try these solutions first	39
Other solutions	39

CONTENTS

 
Confirm that the following parts are included:




Bose TV Speaker (2nd Gen)



Bose TV Speaker (2nd Gen) remote
(battery provided)



Power cord*

 

HDMI cable

* May ship with multiple power cords. Use the power cord for your region.


NOTE: If any part of your product appears to be missing or damaged, don't use it. Visit support.bose.com/tvs2 for troubleshooting articles, videos, and product repair or replacement.

RECOMMENDATIONS

- Place the speaker outside of and away from metal cabinets, other audio/video components, and direct heat sources.
- Place the speaker directly below (preferred) or above your TV with the grille facing into the room.
- Place the speaker on its rubber feet on a stable and level surface. For proper support, both feet must be resting on the surface. Vibration can cause the speaker to move, particularly on smooth surfaces like marble, glass, or highly polished wood.
- If placing the speaker on a shelf or TV stand, position the front of the speaker as close as possible to the front edge of the shelf or stand for optimal sound quality.
- Keep the back side of the speaker at least 0.4 in (1 cm) from any other surface. Blocking the ports on this side affects sound quality.
- Make sure there is an AC (mains) power outlet nearby.
- To avoid wireless interference, keep other wireless equipment 1 – 3 ft (0.3 – 0.9 m) away from the speaker.
- For best sound quality, don't place the speaker in an enclosed cabinet or diagonally in a corner.
- Don't place any objects on top of the speaker.



CAUTION: Do NOT place the speaker on its front, back, or top when in use.

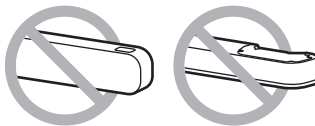

WALL MOUNT THE SPEAKER


You can mount the speaker on a wall. To purchase the Bose Soundbar Wall Bracket, contact your authorized Bose dealer.

Visit: support.Bose.com/tvs2

CAUTION: Do NOT use any other hardware to mount the speaker.

Adjust audio for wall mounting

On the remote, press and hold the Dialogue mode button  for 5 seconds until the TV light on the speaker blinks amber.

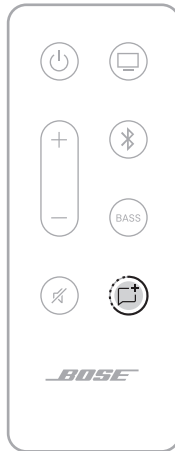

NOTE: If the speaker is taken off the wall, repeat to adjust the audio again.

CONNECT THE SPEAKER TO YOUR TV


Connect the speaker to the HDMI IN eARC or ARC port on your TV using the HDMI cable.

NOTES:

- Using your TV's HDMI (eARC/ARC) port allows you to use your TV remote to control the power, volume, and mute functions of the speaker.
- If your TV does not have an HDMI (eARC/ARC) port, see "Alternate cable options" on page 30.
- The speaker is Roku TV Ready. For more information about setting up the speaker with your Roku TV, see page 29.


1. Connect the HDMI cable to the **HDMI** port on the back of the speaker.
2. Connect the other end of the cable to the **HDMI IN (eARC/ARC)** port on the back of your TV.

NOTE: Your TV port panel may not appear as shown. Make sure you use the port marked **HDMI IN eARC** or **HDMI IN ARC**. If you connect to a standard HDMI port, you won't hear audio from the speaker.

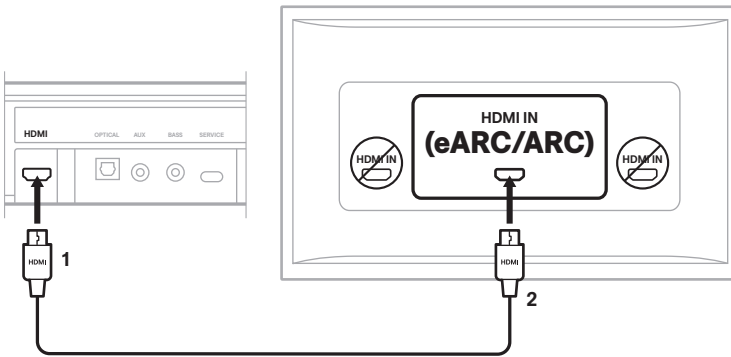

CONNECT THE SPEAKER TO POWER

1. Connect the power cord to the **POWER** port on the back of the speaker.
2. Plug the other end of the power cord into an AC (mains) power outlet.

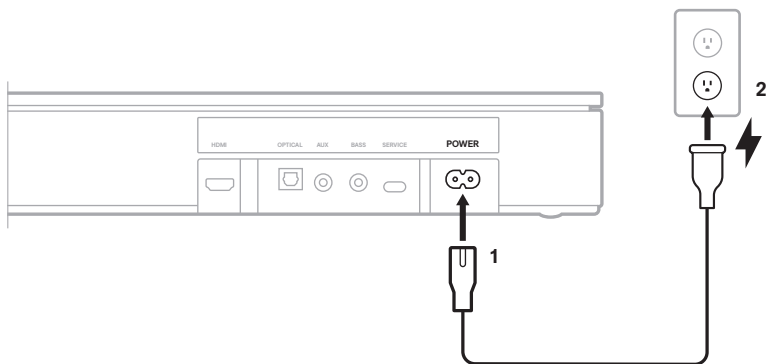


The speaker powers on, and you hear a tone. The speaker defaults to the TV  source.

NOTES:

- If you're using alternate connection method, the speaker defaults to the alternate source (see page 30).
- If you're connecting a *Bluetooth* mobile device, press the *Bluetooth* button  to connect your device (see page 23).


REMOTE FUNCTIONS

Use the remote to control the speaker and *Bluetooth* connections.

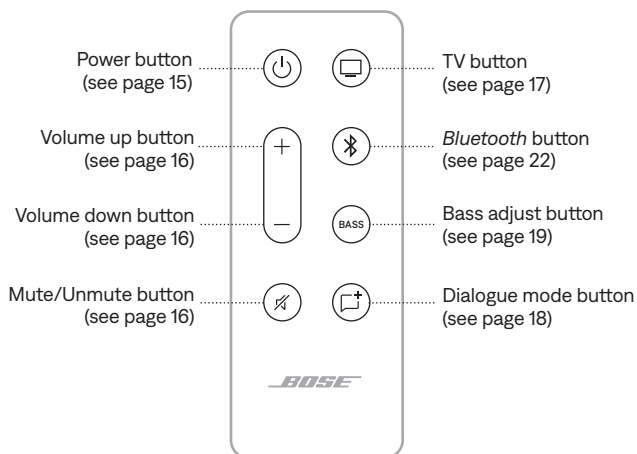

Power

On the remote, press the Power button  to power the speaker on/off.

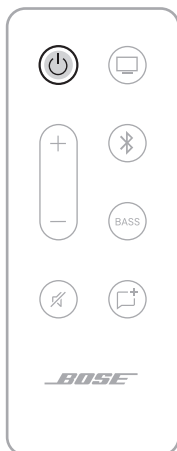

When powered on using the remote, the speaker defaults to the last active source.

NOTE: If you were previously connected to a *Bluetooth* mobile device, press the *Bluetooth* button  to reconnect your device (see page 24).

Volume



FUNCTION	WHAT TO DO
Volume up	Press +. NOTE: To quickly increase the volume, press and hold +.
Volume down	Press –. NOTE: To quickly decrease the volume, press and hold –.
Mute/Unmute	Press  . When audio is muted, the light on the speaker of the current source (TV or <i>Bluetooth</i>) pulses white until audio resumes (see page 27). TIP: You can also press + to resume audio.

TIP: When connected to a *Bluetooth* mobile device, you can also control the volume using your device.

Sources

You can control your TV and *Bluetooth* connections using your remote.

To choose a source, press the button (TV button  or *Bluetooth* button ) on the remote for the source you want to control.



DIALOGUE MODE

Dialogue mode improves the clarity of dialogue and vocals in movies, TV programs, and podcasts by adjusting the audio balance of the system.

On the remote, press the Dialogue mode button  to switch between Dialogue mode and your default audio settings.




When Dialogue mode is enabled, the light for the current source glows green (see page 26).

NOTE: When you enable Dialogue mode, it stays enabled for your current source even if you switch to another source or turn off the speaker. To disable Dialogue mode for a source, press the Dialogue mode button  again.

ADJUST THE BASS

1. On the remote, press the **BASS** button.

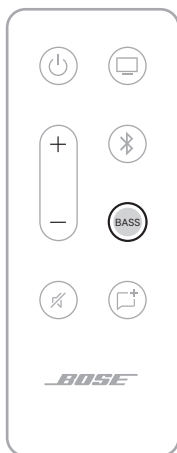

On the speaker, the TV and *Bluetooth* lights blink white 3 times.

2. Adjust the bass by doing one of the following:
 - Press the Volume up button **+** to increase the bass.
 - Press the Volume down button **—** to decrease the bass.

The TV and *Bluetooth* lights on the speaker glow to show the current bass setting.

BASS SETTING	TV	Bluetooth
2 (maximum)	■	□
1	■	□
0 (default)	⋈ □ ⋈	⋈ □ ⋈
-1	□	■
-2 (minimum)	□	■

3. Press **BASS**.

The speaker saves the current bass setting.

NOTE: For optimal sound quality for dialogue-only programs, such as news and talk shows, see "Dialogue mode" on page 18.

RESET THE BASS

On the remote, press and hold **BASS** until the TV and *Bluetooth* lights on the speaker blink 3 times.



The bass settings reset to original factory settings.


PROGRAM A THIRD-PARTY REMOTE

You can program a third-party remote, such as your cable/satellite box remote, to control the volume of your speaker.

NOTE: If HDMI CEC is enabled in your TV, then your TV remote automatically controls the volume of the speaker and does not need to be programmed.

Put the speaker into program mode

On the speaker remote, press and hold the TV button  until the TV and *Bluetooth* lights on the speaker blink 3 times then glow solid white.

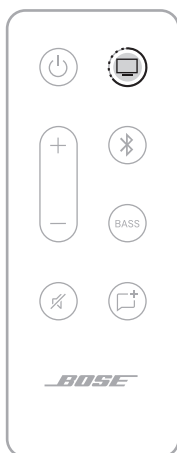

Program the TV remote

1. On the speaker remote, press the Volume up button +.



On the speaker, the TV and *Bluetooth* lights glow.

2. On your TV remote, press and hold the Volume up button + for 2 seconds.
You hear a tone, and the TV light blinks amber twice then glows solid white.


NOTE: If unsuccessful, you hear a tone, and the TV blinks red twice then glows solid white. Repeat steps 1 - 2.

3. Repeat steps 1 - 2 using the Volume down button —.
4. Repeat steps 1 - 2 using the Mute button .

NOTE: Not all third-party remotes are compatible with the speaker. The remote must support IR (infrared) signals in order to control the speaker.

CONNECT A MOBILE DEVICE

1. On the remote, press the *Bluetooth* button .

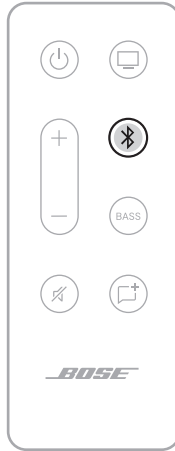

The *Bluetooth* light on the speaker slowly pulses blue.

2. On your mobile device, access *Bluetooth* settings.
3. Select the speaker from the list of available products.



Once connected, you hear a tone. The *Bluetooth* light glows solid white. Bose TV Speaker 2 appears in the list of connected products.

DISCONNECT A MOBILE DEVICE

Use your mobile device's *Bluetooth* menu to disconnect from the speaker.

TIP: You can also disable the *Bluetooth* feature on your mobile device to disconnect. Disabling the *Bluetooth* feature disconnects the speaker and all other *Bluetooth*-connected products.

RECONNECT A MOBILE DEVICE

On the remote, press the *Bluetooth* button ✱.

The speaker tries to reconnect with the most recently-connected mobile device. When connecting, the *Bluetooth* light on the speaker blinks white.

NOTES:

- Make sure *Bluetooth* connection is enabled on your mobile device.
- The mobile device must be within 30 ft (9 m) and powered on.

CONNECT AN ADDITIONAL MOBILE DEVICE

You can store up to eight mobile devices in the speaker device list, and the speaker can be actively connected to two mobile devices at a time.

NOTE: You can play audio from only one mobile device at a time.

1. On the remote, press the *Bluetooth* button .



2. On your mobile device, select Bose TV Speaker 2 from the list of available products.


NOTE: Make sure *Bluetooth* connection is enabled on your mobile device.

CLEAR THE SPEAKER DEVICE LIST

1. On the remote, press and hold the *Bluetooth* button  for 10 seconds until you hear a tone.
2. Delete Bose TV Speaker 2 from the *Bluetooth* list on your mobile device.

All mobile devices are cleared, and the speaker is ready to connect (see page 23).

The LED lights located on the front of speaker show the speaker status.

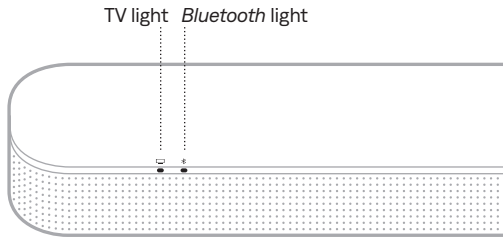

NOTE: The lights display the current source's highest priority status.

BLUETOOTH STATUS

Shows the *Bluetooth* connection status of mobile devices.

LIGHT ACTIVITY			SYSTEM STATE
Bluetooth light slowly pulses blue			Ready to connect
Bluetooth light blinks white			Connecting
Bluetooth light glows white			Connected

MEDIA PLAYBACK AND VOLUME STATUS

Shows the speaker status when controlling media playback and volume.

LIGHT ACTIVITY			SYSTEM STATE
TV light is solid white			Power on TV
<i>Bluetooth</i> light is solid white			Connected to a <i>Bluetooth</i> device
TV light is solid green			Dialogue mode enabled for TV
<i>Bluetooth</i> light is solid green			Dialogue mode enabled for <i>Bluetooth</i> -connected device
TV light blinks white			Changing volume for TV
<i>Bluetooth</i> light blinks white			Changing volume for <i>Bluetooth</i> -connected device
TV light blinks green			Changing volume in Dialogue mode for TV
<i>Bluetooth</i> light blinks green			Changing volume in Dialogue mode for <i>Bluetooth</i> -connected device
TV light slowly pulses white			Mute enabled for TV
<i>Bluetooth</i> light slowly pulses white			Mute enabled for <i>Bluetooth</i> -connected device
TV light slowly pulses green			Mute enabled in Dialogue mode for TV
<i>Bluetooth</i> light slowly pulses green			Mute enabled in Dialogue mode for <i>Bluetooth</i> -connected device

ERROR STATUS

Shows the status of error alerts.

LIGHT ACTIVITY			SYSTEM STATE
TV light blinks red			Speaker error - disconnect from power then reconnect. If error persists, contact Bose customer service

ROKU TV READY

The Bose TV Speaker (2nd Gen) is Roku TV Ready certified. Connect the speaker to the HDMI IN eARC/ARC port on your Roku TV using the HDMI cable, then follow the on-screen setup instructions. Once completed, control the speaker with your Roku TV remote and access the speaker settings using the on-screen Roku TV settings menu.

NOTES:

- The speaker may require a software update to support Roku TV Ready. For more information, contact Bose customer service. Visit: support.Bose.com/tvs2
- Roku TV Ready isn't available in all regions. For more information, visit: go.roku.com/rocutvready

ALTERNATE CABLE OPTIONS

Some TVs don't have HDMI eARC/ARC ports. Use an alternate connection method to connect your TV to the speaker.

If you switch between cables, power off the speaker before connecting the new cable (see page 15).


PROBLEM	WHAT TO DO
TV only has an optical port	Connect your TV using an optical cable (not provided). See "TV only has an optical port" on page 31.
TV only has an analog output ports	Connect your TV using a 3.5 mm to RCA stereo cable (not provided). See "TV only has analog output ports" on page 32.
TV only has a headphone port	Connect your TV using a 3.5 mm stereo cable (not provided). See "TV only has a headphone port" on page 33.

TV only has an optical port

If your TV only has an optical port, use an optical cable (not provided) to connect the speaker.

CAUTION: Remove any protective coverings from both ends of an optical cable before use. Inserting the plug with coverings still attached, on or in the wrong orientation, can damage the plug and/or the port.

1. Connect one end of the optical cable into your TV's **OPTICAL** port.
2. Align the plug with the speaker's **OPTICAL** port and connect the plug carefully.

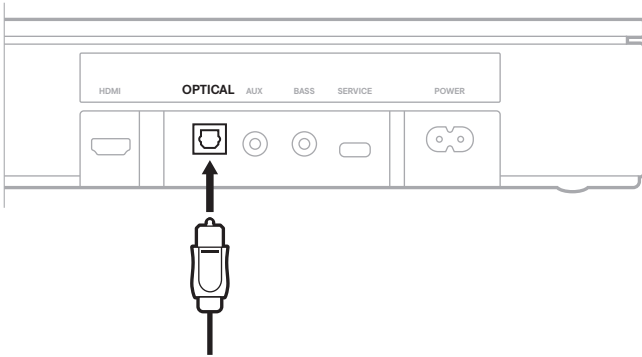

NOTE: The port has a hinged door that swings inward when inserting the plug.

3. Firmly push the plug into the port until you hear or feel a click.




4. Verify that audio is coming from the speaker only (see page 34).

TV only has analog output ports

If your TV only has analog output ports (red and white), use a 3.5 mm to RCA stereo cable (not provided) to connect to the speaker.

1. Connect the RCA analog cable into the **Audio OUT RCA** (red and white) ports on your TV.
2. Connect the other end of the cable to the AUX port on the speaker.

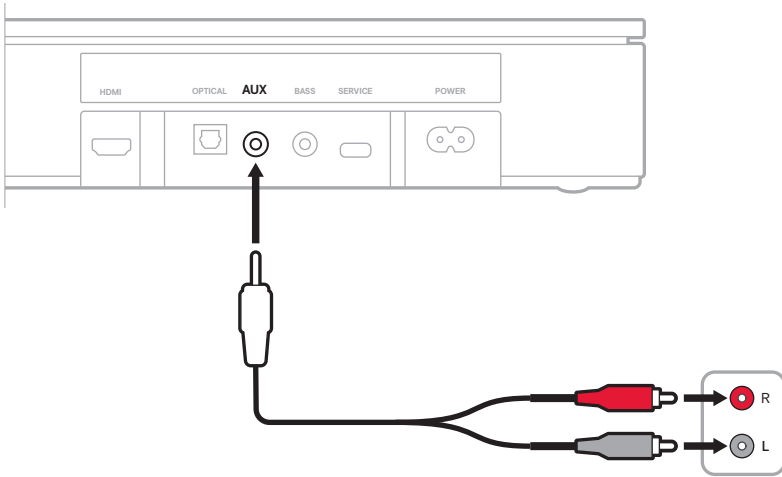


3. Verify that audio is coming from the speaker only (see page 34).

TV only has a headphone port

If your TV only has a headphone port, use a 3.5 mm stereo cable (not provided) to connect the speaker.

1. Connect one end of a 3.5 mm cable to the TV headphones port.
2. Connect the other end of the cable to the AUX port on the speaker.

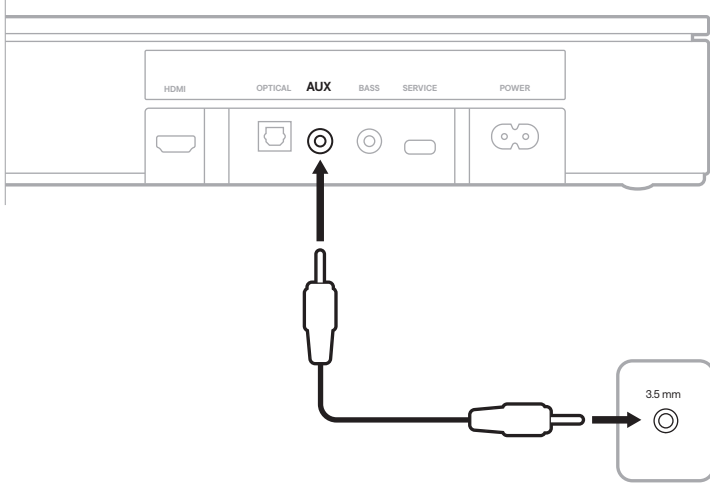

3. Verify that audio is coming from the speaker only (see page 34).
4. To ensure optimal volume control from your speaker:
 - a. Set your TV volume to 75 percent of maximum.
 - b. Set the speaker volume using the speaker remote.

VERIFY AUDIO FROM THE SPEAKER


1. Power on the alternate source or cable/satellite box.
2. Select the appropriate input on the TV.
3. Play audio on the TV.
4. Verify audio is coming from the Bose speaker and not the TV by pressing the Mute button  on the Bose remote. If you hear audio from the TV, refer to your TV's owner's guide or visit support.bose.com/tvs2

ALTERNATE CONTROLS

Auto-wake (optical/analog connection only)

You can set the speaker to power on whenever a sound signal is received from an optical or analog cable.

To toggle between auto-wake and default power settings, press and hold the Power button  until you hear a tone and the TV and *Bluetooth* lights on the speaker blink amber 3 times.

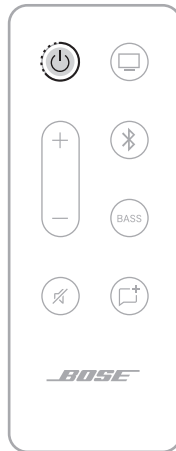

You can connect these accessories to your speaker using a 3.5 mm audio cable (not provided).

- **Bose Lifestyle Ultra Subwoofer**
- **Bose Bass Module 500**
- **Bose Bass Module 700**

For more information, refer to your accessory owner's guide.

NOTE: Connect the bass module to the **BASS** port on the back of the speaker. Don't connect it to the **AUX** port.

SERIAL NUMBER AND REGULATORY MARKINGS LOCATION

The serial number and regulatory markings are located on the product label on the back of the speaker and on the bottom of the speaker.

UPDATE THE SPEAKER


For information about how to update the speaker, visit support.Bose.com/tvs2

REPLACE THE REMOTE BATTERY


⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

NOTE: For more information, see "WARNINGS/CAUTIONS" on page 2.

1. Using a coin, turn the battery compartment cover left (counter-clockwise), and remove the cover.

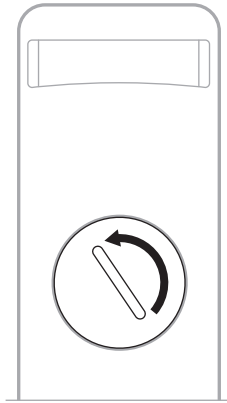

2. Insert the new battery flat side up, with the + symbol facing up.

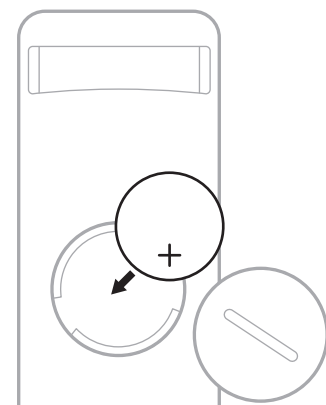

NOTE: Use only an agency approved (e.g., UL) CR2032 or DL2032 3-volt lithium battery.

3. Reset the cover and turn it right (clockwise) to lock in place.

CLEAN THE SPEAKER

Clean the exterior of the speaker with a soft dry cloth.

CAUTIONS:

- Do NOT allow liquids to spill onto the speaker or into any openings.
- Do NOT blow air into the speaker.
- Do NOT use a vacuum to clean the speaker.
- Do NOT use any sprays near the speaker.
- Do NOT use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do NOT allow objects to drop into any openings.

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: support.Bose.com/tvs2

LIMITED WARRANTY

The speaker is covered by a limited warranty. Visit our website at worldwide.Bose.com/Warranty for details of the limited warranty.

To register your product, visit worldwide.Bose.com/ProductRegistration for instructions. Failure to register will not affect your limited warranty rights.

TRY THESE SOLUTIONS FIRST

If you experience problems with the speaker, make sure:

- The speaker is plugged firmly into a live AC (mains) power outlet (see page 13).
- All cables are secure.

If you experience problems connecting to your *Bluetooth* device, see the table below to identify common solutions.

SYMPTOM	SOLUTION
Speaker doesn't connect with Bluetooth device	On your device, turn the <i>Bluetooth</i> feature off and then on. Delete the speaker from the <i>Bluetooth</i> list. Connect again (see page 23). Clear the speaker device list (see page 25). Connect again (see page 23). Connect a different device (see page 25). Make sure you're using a compatible <i>Bluetooth</i> device.

OTHER SOLUTIONS

If you could not resolve your issue, you can also access troubleshooting in the Bose app and articles, videos, and other resources at: support.Bose.com/tvs2-og

If you are unable to resolve your issue, contact Bose customer service.

Visit: worldwide.Bose.com/contact



904031-0010