

BOSE

LIFESTYLE ULTRA SPEAKER

Please read and keep all safety and use instructions.

Declarations of conformity can be found at: www.Bose.com/compliance

Important Safety Instructions

Do not use this apparatus near water.

Clean only with a dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus does not operate normally, or has been physically damaged.

WARNINGS/CAUTIONS

- To reduce the risk of fire or electrical shock do NOT expose this product to rain, dripping, splashing, or moisture and do not place liquid filled objects such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Do NOT use in vehicles or boats.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.




仅适用于 2000m 以下地区安全使用

Use at altitude less than 2000 meters only.

- Only use the following hardware to mount this product: Bose Lifestyle Wall Bracket and Bose Lifestyle Floor Stand.
- Do not place or install near any heat sources, such as fireplaces, radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not mount the product in locations where condensation may occur.
- Product is not intended for use by children.
- The product label is located on the bottom of the product.

WARNING: Do not expose product or mounting components to any chemical substances that are not specified by Bose, including but not limited to lubricants, cleaning agents, contact sprays, or hydrocarbon based solvents. Exposure to such substances can lead to degradation of the plastic material, resulting in cracking and creating a falling hazard.

Names and Contents of Toxic or Hazardous Substances or Elements											
Toxic or Hazardous Substances and Elements											
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)	Dybutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)	Butyl benzyl phthalate (BBP)	Bis(2-ethylhexyl) phthalate (DEHP)	
PCBs	X	O	O	O	O	O	O	O	O	O	
Metal Parts	X	O	O	O	O	O	O	O	O	O	
Plastic Parts	O	O	O	O	O	O	O	O	O	O	
Speakers	X	O	O	O	O	O	O	O	O	O	
Cables	X	O	O	O	O	O	O	O	O	O	
This table is prepared in accordance with the provisions of SJ/T 11364.											
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.											
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.											

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "6" is 2016 or 2026.

Importers: Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100

Input Rating: 100 - 240V ~, 50/60Hz, 20W

Model: 443508. The CMIIT ID is located on the bottom of the speaker.

This product is covered by a **Bose Limited Warranty**, available at worldwide.Bose.com/Warranty

License Disclosures: To view the license disclosures that apply to the third-party software packages included as components of the Bose Lifestyle Ultra Speaker, use the Bose app. You can access this information from the Settings menu.

Apple, AirPlay, the Apple logo, and Apple Music are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Android and other marks are trademarks of Google LLC.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Wi-Fi is a registered trademark of Wi-Fi Alliance®.

Bose, the B logo, and Lifestyle are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2026 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Please complete and retain for your records

The serial and model numbers are located on the bottom of the speaker and under the rubber foot.

Serial number: -----

Model number: 443508

Please keep your receipt with your owner's guide. Now is a good time to register your Bose product. You can easily do this by going to worldwide.Bose.com/ProductRegistration

WHAT'S IN THE CARTON

Contents 7

SPEAKER PLACEMENT

Recommendations 8
Mount the speaker..... 9

CONNECT THE SPEAKER TO POWER 10

BOSE APP SETUP

Download the Bose app 11

SET UP THE SPEAKER

Set up your home theater..... 12

POWER

Power on 13
Network Standby..... 13
 Enter Network Standby (manually) 13
 Exit Network Standby 13

SPEAKER CONTROLS

Media playback 15
Volume 16

SPEAKER STATUS

Power status..... 17
Update and error status 18

BUILD A BOSE LIFESTYLE COLLECTION HOME THEATER SYSTEM

Benefits 19

Compatible products 19

..... 19

CARE AND MAINTENANCE

Update the speaker 20

Clean the speaker 20

Replacement parts and accessories 21

Limited warranty 21

TROUBLESHOOTING

Try these solutions first 22

 
Additional solutions 22

Reset the speaker 23


Restore the speaker to factory settings 24

CONTENTS

Confirm that the following parts are included:

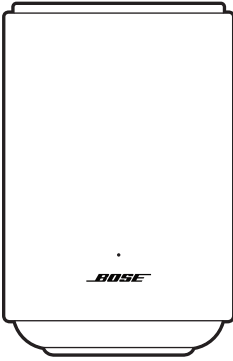

Bose Lifestyle Ultra Speaker

 

Power cord

NOTE: If any part of your product appears to be missing or damaged, don't use it. Visit support.bose.com/lu-speaker for troubleshooting articles, videos, and product repair or replacement.

RECOMMENDATIONS

 
For best performance, follow these recommendations when placing the speaker:

- Do NOT place the speaker on top of audio/video equipment (receivers, TVs, etc.), or any other object that may generate heat. Heat generated by these items may result in poor speaker performance.
- Do NOT place any objects on top of the speaker or in front of the speaker.
- To avoid interference, keep other wireless equipment 1 – 3 ft (0.3 – 0.9 m) away from the speaker. Place the speaker outside of and away from metal cabinets and direct heat sources.
- Place the speaker on a stable and level surface.
- Keep the back and sides of the speaker at least 2 – 3 in (5.08 – 7.62 cm) from any other surface or object. Blocking the port(s) affects sound quality.
- Make sure there is an AC (mains) power outlet nearby.

MOUNT THE SPEAKER

You can mount the speaker on a wall or attach it to a floor stand. To purchase the Bose Lifestyle Wall Bracket or Bose Lifestyle Floor Stand, contact your authorized Bose dealer.


Visit: support.bose.com/lu-speaker

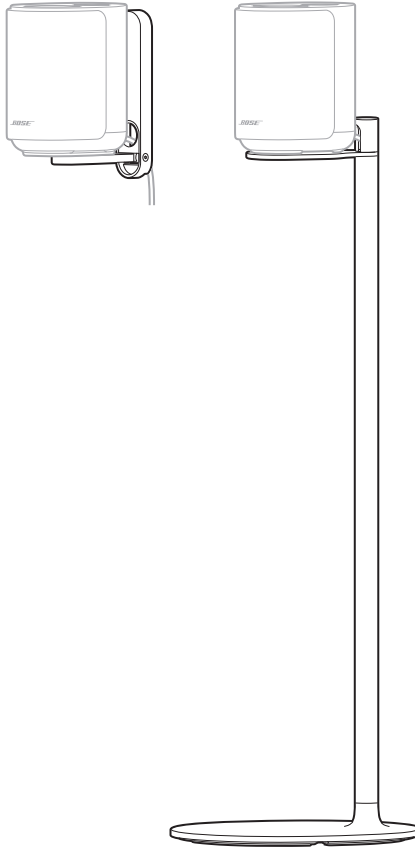

CAUTION: Do NOT use any other hardware to mount the speaker.

Connect the speaker to an AC (mains) power outlet using the power cord.

 1. Connect the power cord to the power port on the speaker.
2. Plug the other end of the power cord into an AC (mains) power outlet.

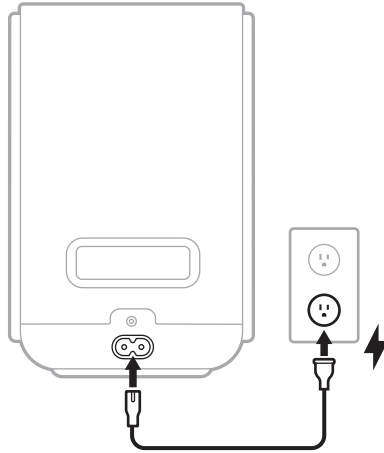

The speaker powers on. The status light slowly pulses white, blue, green, red, yellow, purple, and amber (repeated) and you hear a tone. The speaker is ready to connect.

NOTE: The status light slowly pulses white, blue, green, red, yellow, purple, and amber (repeated) and you hear a tone only during initial product setup. If you're reconnecting the speaker to power, the status light slowly pulses white, then turns off. The speaker is fully powered on.

3. Set up the speaker using the Bose app (see page 11).

The Bose app lets you set up and control the speaker from a mobile device, such as a smartphone or tablet.

Using the app, you can build a home theater system, manage speaker settings, and learn about any updates and new features made available by Bose.

NOTE: If you've already downloaded the Bose app for another Bose product, open the app then add the speaker from the product list screen.

DOWNLOAD THE BOSE APP

1. On your device, download the Bose app.



setup.Bose.com/lu-speaker



2. Follow the app instructions to set up the speaker as part of a home theater system with other Bose Lifestyle Collection products (see page 19).

When you begin setup, the speaker status light glows solid green.

NOTE: If you're connecting multiple Bose products at once, start with the soundbar for a more seamless setup.

SET UP YOUR HOME THEATER

Immerse yourself in your favorite movies and TV shows by creating a surround sound experience for your home theater (see page 19).

You build a Bose Lifestyle Collection home theater system using the following Bose products:

- Bose Lifestyle Ultra Soundbar
- Two Bose Lifestyle Ultra Speakers
- (Optional) Bose Lifestyle Ultra Subwoofer

NOTE: To set up a Bose Lifestyle Collection home theater system, use the Bose app (see page 11). If you are connecting multiple Bose products at once, start with the soundbar for easier setup.

POWER ON



When you plug the speaker into an AC (mains) power outlet, the speaker automatically powers on. The status light slowly pulses white.

 
NETWORK STANDBY

The speaker transitions to a Network Standby state when audio has stopped and you have not pressed any buttons for 20 minutes.

NOTE: You can disable the standby timer using the Bose app. You can access this option from the Settings menu.




Enter Network Standby (manually)

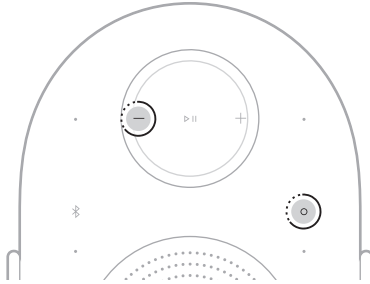To put the speaker into Network Standby manually, touch and hold the Action button  and Volume down button  for 5 seconds until the status light blinks white 2 times.

 


Exit Network Standby

To wake the speaker from Network Standby:




- Tap the *Bluetooth* button , the Action button , or the Play/Pause button .
- Play or resume audio using your device or using the Bose app (see page 11).

The speaker controls are located on the top of the speaker. They are used to control the speaker.




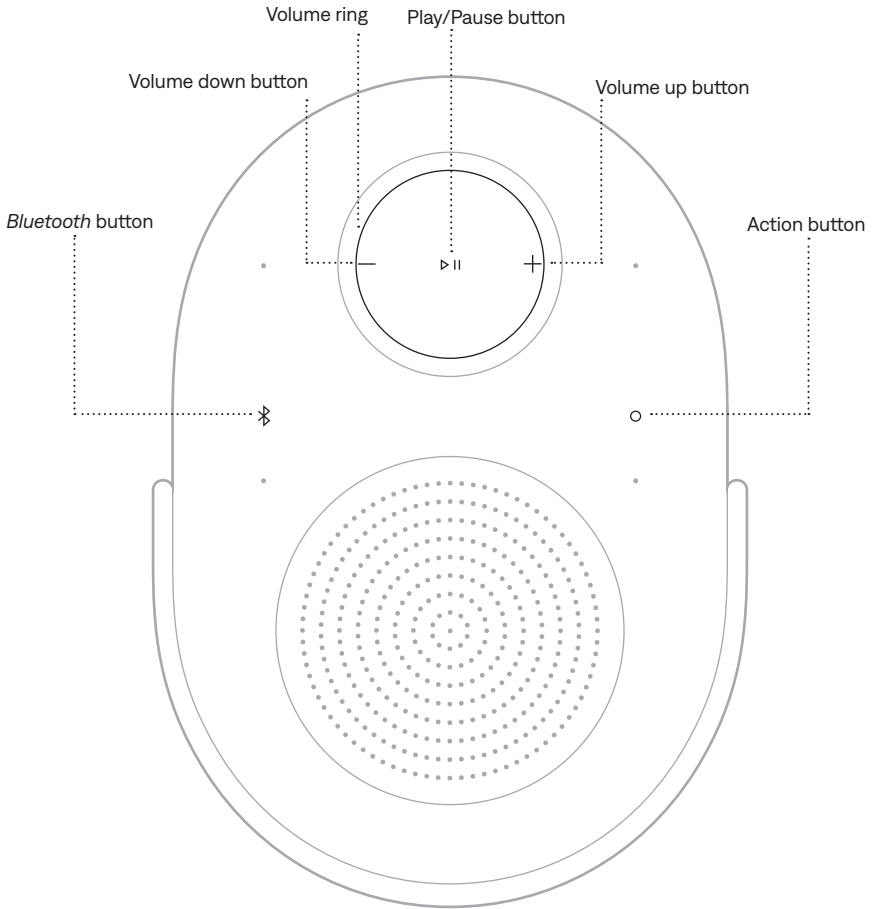


TIP: You can also control your speaker as part of a home theater by using the Bose app (see page 11).

MEDIA PLAYBACK

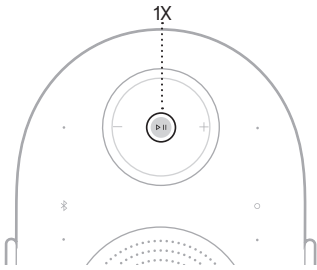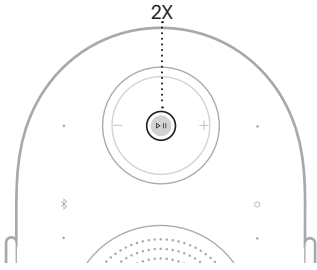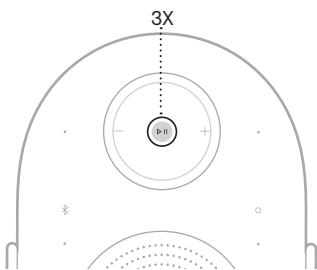FUNCTION	WHAT TO DO
Play/Pause	Tap ▷ . 
Skip forward	Double-tap ▷ . 
Skip backward	Triple-tap ▷ . 


VOLUME

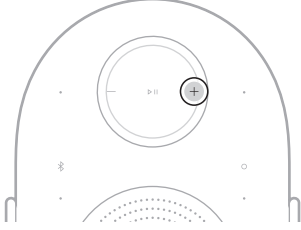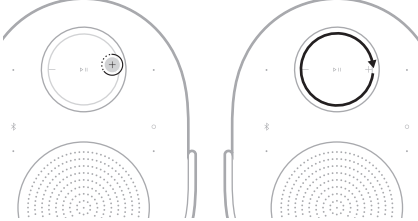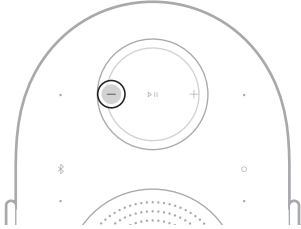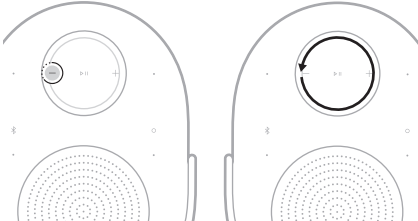FUNCTION	WHAT TO DO
<p>Volume up</p>	<p>Tap +.</p> 
<p>Quickly increase the volume</p>	<p>Touch and hold + or swipe clockwise on the volume ring.</p> 
<p>Volume down</p>	<p>Tap -.</p> 
<p>Quickly decrease the volume</p>	<p>Touch and hold - or swipe counter-clockwise on the volume ring.</p> 

NOTE: When the volume has been fully increased or decreased, the status light blinks white 2 times and you hear a tone.

The status light is located on the front of the speaker and shows the speaker status.

 NOTE: When the speaker successfully executes a command, the status light blinks white 2 times.

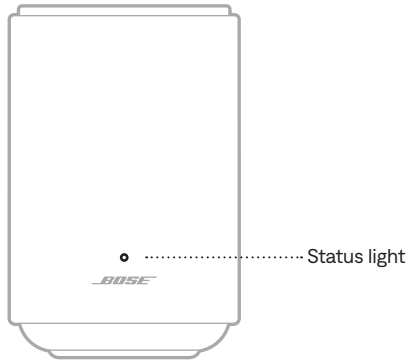

POWER STATUS

Shows the power status of the speaker.

STATUS LIGHT ACTIVITY	SYSTEM STATE
Slowly pulses white, blue, green, red, yellow, purple, and amber (repeated)	Powering on, ready for setup NOTE: Occurs only during initial product setup.
Slowly pulses white	Powering on

UPDATE AND ERROR STATUS

Shows the status of software updates and error alerts.

STATUS LIGHT ACTIVITY	SYSTEM STATE
Slowly pulses white	Updating speaker
Slowly pulses amber	Restoring speaker
Quickly blinks white and amber (repeated)	Request is temporarily unavailable - try again later
Slowly pulses amber	Source error
Quickly blinks red	Error - contact Bose customer service

The Bose Lifestyle Collection of products have seamless integration designed to work together to create one aspirational and personal experience.

Building a home theater system creates a surround sound experience and immerses you in your favorite movies and TV shows. Use the Bose app to build a Bose Lifestyle Collection home theater system (see page 11).

BENEFITS

- **Audio quality:** Set the mood of the room or create a transformational experience with rich, powerful, and immersive sound.
- **Simplicity:** Access audio that easily integrates with your home decor.
- **Flexibility:** Take control with the flexibility to play what you want, how you want it, immediately.

COMPATIBLE PRODUCTS

You build a Bose Lifestyle Collection home theater system using the following products:

- Bose Lifestyle Ultra Soundbar: support.bose.com/lu-soundbar
- Two Bose Lifestyle Ultra Speakers: support.bose.com/lu-speaker
- (Optional) Bose Lifestyle Ultra Subwoofer: support.bose.com/lu-subwoofer

NOTES:

- All products must be in the Bose app.
- You can control the media playback and volume on the home theater system using the product controls, the Bose app, or your music service.
- When setting up a home theater system with a Bose Lifestyle Ultra Speaker, you must have two speakers to create a left and right pair.
- For more information about other Bose Lifestyle Collection products, refer to the product owner's guide for that product.

UPDATE THE SPEAKER

After you complete the setup process of your home theater in the Bose app, the speaker updates automatically.

NOTE: If an update is available, the software begins updating and the status light slowly pulses white. When the update is complete, the speaker reboots.

CLEAN THE SPEAKER

Wipe the outside surface of the speaker with a soft, dry cloth. To remove stains, use a soft, damp cloth.

NOTE: The speaker controls could be inadvertently activated during the cleaning procedure.

CAUTIONS:

- Do NOT allow liquids to spill onto the speaker or into any openings.
- Do NOT blow air into the speaker.
- Do NOT use any sprays near the speaker.
- Do NOT use any solvents, chemicals or cleaning solutions containing alcohol, ammonia or abrasives.
- Do NOT allow objects to drop into any openings.

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: support.Bose.com/lu-speaker

LIMITED WARRANTY

The speaker is covered by a limited warranty. Visit our website at worldwide.Bose.com/Warranty for details of the limited warranty.

To register your product, visit worldwide.Bose.com/ProductRegistration for instructions. Failure to register will not affect your limited warranty rights.

TRY THESE SOLUTIONS FIRST

If you experience problems with the speaker, make sure that:

- The speaker is plugged firmly into a live AC (mains) power outlet (see page 13).
- All cables are secure.
- The speaker is set up in the Bose app (see page 11).

ADDITIONAL SOLUTIONS

If you could not resolve your issue, you can also access troubleshooting in the Bose app or view articles, videos, and other resources at: support.bose.com/lu-speaker

If you are unable to resolve your issue, contact Bose customer service.

Visit: worldwide.bose.com/contact


RESET THE SPEAKER

If the speaker is unresponsive, you can reset it.

NOTE: Resetting the speaker resets the product controls and reboots the speaker. It doesn't clear any device settings.

Do one of the following:

- Unplug the speaker from the AC (mains) power outlet, wait 30 seconds, then plug the speaker back into the outlet.
- Touch and hold the Play/Pause button >|| and the Volume up button + for 5 seconds until the status light blinks white 2 times.

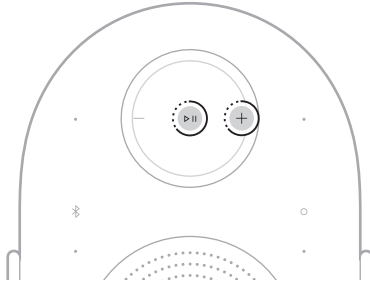 



The reset is complete. The speaker powers on, and the status light slowly pulses white.

 
RESTORE THE SPEAKER TO FACTORY SETTINGS

Restoring the factory settings clears all source, audio, and network settings from the speaker and returns the speaker to its default settings.

NOTE: Restoring the speaker disconnects any Bose Lifestyle Collection products that are wirelessly connected to the speaker.

1. In the Bose app, remove the speaker from your Bose account.
2. Touch and hold the Play/Pause button  and the Volume down button  for 10 seconds until the status light slowly pulses amber.

NOTE: The status light glows solid white, then slowly pulses amber.

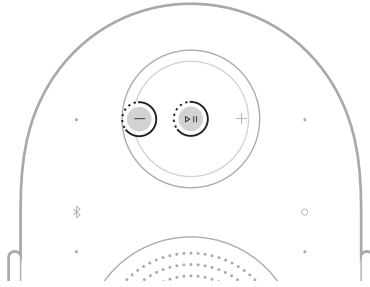

The restore is complete. The speaker reboots and is ready to connect.

3. Set up your speaker using the Bose app (see page 11).



899873-0010